

Montageanleitung:

Mit beiliegenden Schrauben und Dübeln Spender befestigen.

Löcher mit 6 mm bohren.

Bohrlöcher am besten den Wandfugen anpassen.

Inbetriebnahme:

Spender füllen und Pumpe mehrmals bis zur ersten Dosierung betätigen.


Öffnen:

Steckschlüssel wie auf der Abbildung gezeigt, zwischen Verschlussplatte und Spenderboden bis zum Anschlag eindrücken und Verschlussplatte abziehen.

Pflege:

Spender ist wartungsfrei.

Sollte jedoch die Pumpe verklebt sein, Spender in heißes Wasser legen und durchpumpen, bis Funktion wieder hergestellt ist.

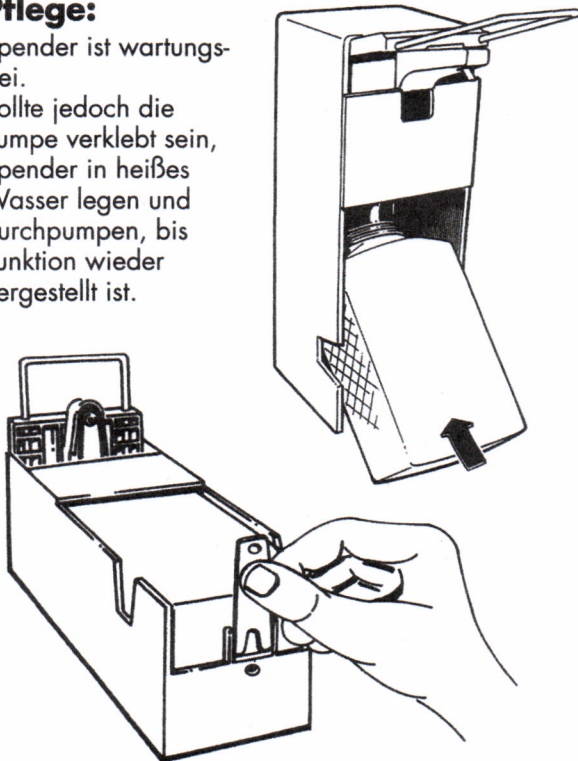

Installation Instructions:

Fasten the dispenser in place using the enclosed screws and wall plugs.

Drill holes using 6 mm bit.

Best of all, drill holes to match wall joints.

Operation:

Fill dispenser and pump several times until first dose is dispensed.

To open:

Push socket wrench in fully between sealing plate and dispenser bottom as shown in illustration and remove sealing plate.

Maintenance:

The dispenser is maintenance-free.

However, if the pump gets blocked, place the dispenser in hot water and pump through until it functions correctly again.

